



ZAXIS450-3/500LC-3/520LCH-3 ELECTRICAL CIRCUIT DIAGRAM

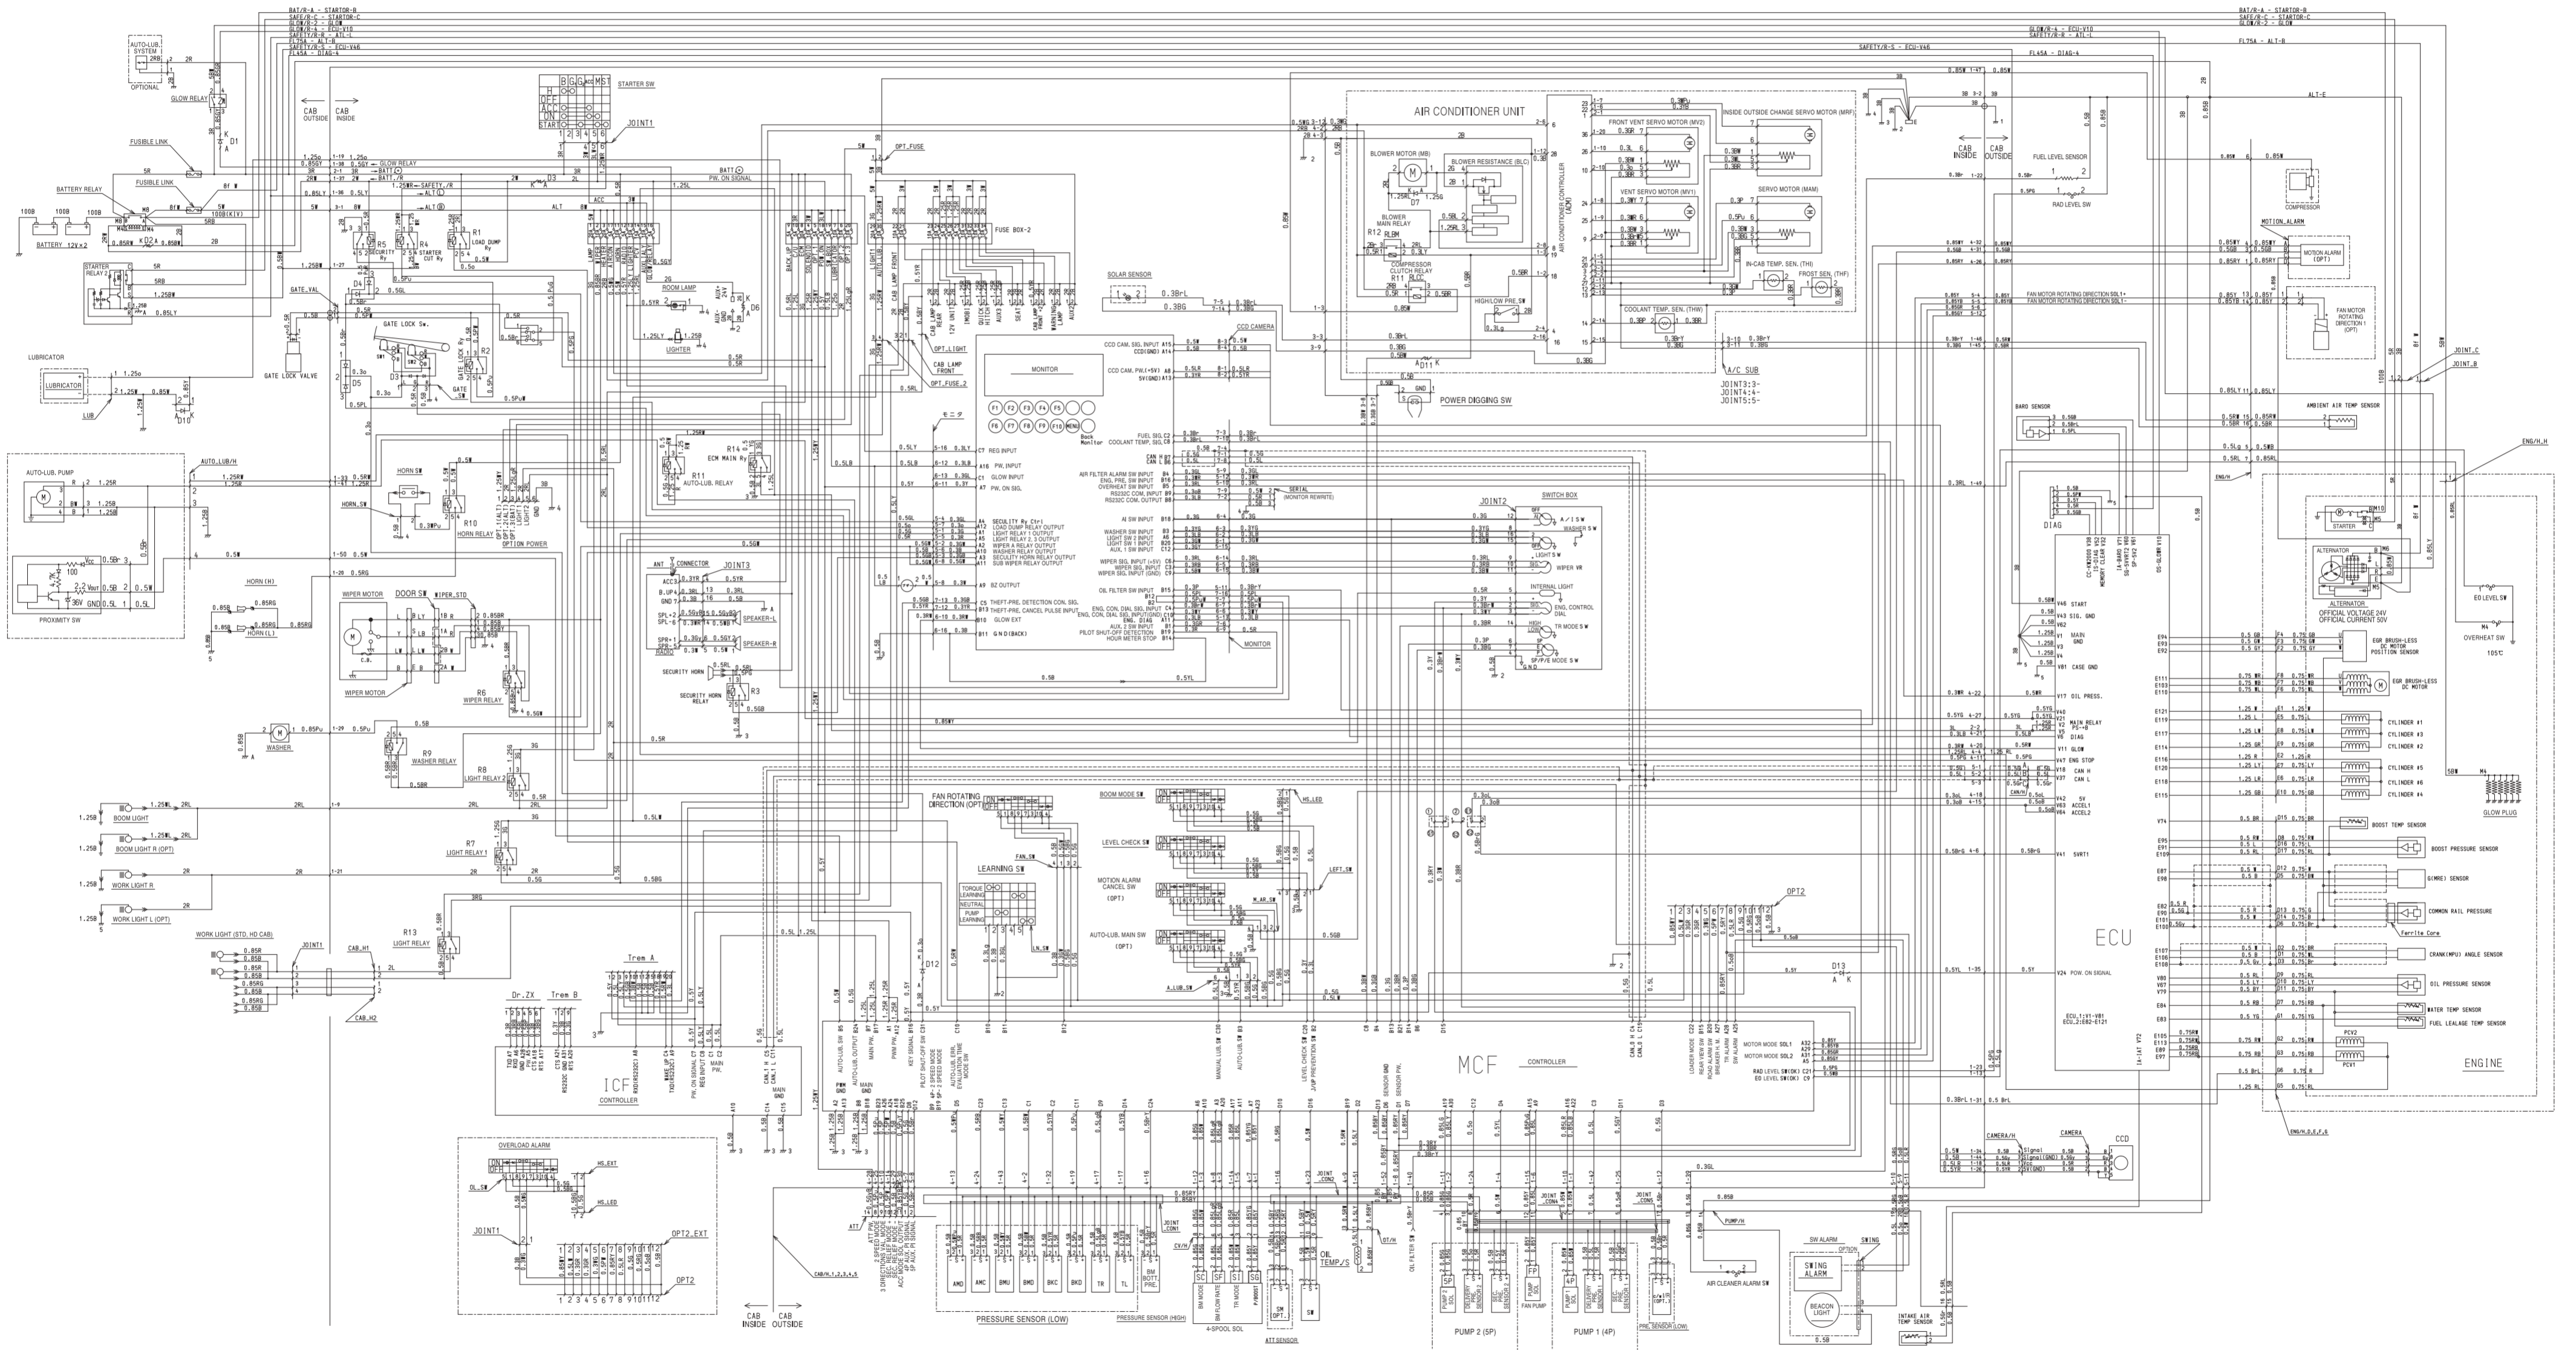

ZAXIS450-3/500LC-3/520LCH-3 CONNECTORS

<p>DEUTSCH DT06-4S-CE05</p> <p>CAMERA/H(PU) RAD/H(RA) CAMERA (CCD SIDE)</p>	<p>DEUTSCH DT04-4P-CE07</p> <p>CAMERA/H(MA) AUTO_LUB/H(MA) CAMERA (PU)</p>	<p>DEUTSCH DT06-3S-CE05</p> <p>CAN/H(MA)</p>	<p>DEUTSCH DT04-3P-CE03</p> <p>CAN/H_2(CA)</p>	<p>DEUTSCH DT06-12SA-CE05</p> <p>ENG/H_5(MA)</p>	<p>DEUTSCH DT04-12PA-CE07</p> <p>ENG/H_5(CA)</p>	<p>EJ(II) AMP 3-POLE FEMALE 173091</p> <p>BMB_P/S 5P_P/S 4P_P/S</p>	<p>EJ(II)+ AMP 3-POLE FEMALE 174357</p> <p>BARO_P/S</p>	<p>AMP EJ(II)+ 2-POLE FEMALE 174352</p> <p>5P_SOL 4P_SOL FP_SOL</p>	<p>WITOCO 272FCW-8P</p> <p>CCD</p>									
<p>YAZAKI 7283-5055-40 (SWP52P)</p> <p>CAB/H_1(CA)</p>	<p>YAZAKI 7182-5055-40 (SWP52P)</p> <p>CAB/H_1(MA)</p>	<p>AMP CT-1473252-1</p> <p>ECU_2(MA)</p>	<p>AMP CT-1473244-1</p> <p>ECU_1</p>	<p>AMP 179681-6</p> <p>MCF_A</p>	<p>AMP 179679-6</p> <p>MCF_B</p>	<p>AMP 179680-5</p> <p>MCF_C</p>	<p>AMP 179678-6</p> <p>MCF_D</p>											
<p>SUMITOMO F(6189-0715)</p> <p>ENG/H(EN)</p>	<p>SUMITOMO M(6188-0495)</p> <p>ENG/H(MA)</p>	<p>YAZAKI 7183-4000</p> <p>CAB/H_4(CA)</p>	<p>MITSUBISHI NMWP32F-GY</p> <p>CAB/H_4(MA)</p>	<p>MITSUBISHI NMWP32M-GY</p> <p>CAB/H_4(MA)</p>	<p>SUMITOMO F(6189-0714)</p> <p>CV/H PUMP/H(PU)</p>	<p>SUMITOMO M(6188-0494)</p> <p>ENG/H_D(MA) PUMP/H(MA) CV/H(MA)</p>	<p>SUMITOMO F(6195-0149)</p> <p>ENG/H_E(MA)</p>	<p>SUMITOMO M(6195-0051)</p> <p>ENG/H_F(MA)</p>	<p>SUMITOMO F(6195-0021)</p> <p>ENG/H_G</p>	<p>YAZAKI SWP 7123-7544</p> <p>ATT</p>	<p>YAZAKI RV03FB</p> <p>BMU_P/S BMD_P/S AMD_P/S BKC_P/S 5P_2P/S</p>	<p>YAZAKI 7283-7028 090 (WATER PROOF)2PF</p> <p>AMBIENT AIR_T/S</p>	<p>SJD-DSD-06F-W</p> <p>KEY-SW JOINT1(CA)</p>	<p>X01F-GY</p> <p>COMPRESSOR</p>				
<p>AMP 353031-1</p> <p>ICF_A</p>	<p>AMP 353027-1</p> <p>ICF_C</p>	<p>C12FW</p> <p>OPT2</p>	<p>YAZAKI 7123-1402</p> <p>RADIO</p>	<p>AMP 174045-2</p> <p>CN2</p>	<p>C16MW</p> <p>JOINT2(CA) JOINT5(MO)</p>	<p>C16MB</p> <p>JOINT3(CA) JOINT6</p>	<p>C16MBR</p> <p>JOINT7(MO)</p>	<p>AMP 174047-2</p> <p>A/C_CONT1</p>	<p>AMP 174046-2</p> <p>A/C_CONT2</p>	<p>JFC 2-POLE FEMALE</p> <p>OIL_TEMP/S</p>								
<p>C02MW</p> <p>ST_EC2 EM_EC2 EC1</p>	<p>C02FW</p> <p>ST_EC1 EM_EC1 EC2</p>	<p>YAZAKI 7123-7830 C03FW</p> <p>SERIAL</p>	<p>YAZAKI C04FB</p> <p>M_AR_SW FAN_SW</p>	<p>YAZAKI C06FBR</p> <p>A_LUB_SW(CA)</p>	<p>YAZAKI C06MBR</p> <p>A_LUB_SW</p>	<p>C06FW</p> <p>LN_SW</p>	<p>C06FB</p> <p>EG_STOP</p>	<p>C16FW</p> <p>JOINT5(CA) SEC_OPT</p>	<p>C16FB</p> <p>JOINT3(A1) JOINT6(CA)</p>	<p>C16FBR</p> <p>JOINT7(CA)</p>	<p>AMP 175967-2</p> <p>CN1_2 Trem_A</p>	<p>AMP 175966-2</p> <p>CN1_1 Trem_B</p>	<p>SJD PH805-04028</p> <p>MOTION ALARM</p>					
<p>C02FB</p> <p>HS_LED</p>	<p>C04FW</p> <p>WIPER_STD JOINT8(CA)</p>	<p>C04MW</p> <p>JOINT8(MO)</p>	<p>YAZAKI 7183-4000</p> <p>LC_SW AR_C_SW</p>	<p>Z06F-GY</p> <p>DIAG</p>	<p>Z04F-GY</p> <p>SWING</p>	<p>Z03F-GY</p> <p>OT/H CW_P/S GATE_SW ATT_P/S</p>	<p>Z03M-GY</p> <p>OT/H_2</p>	<p>Z02F-GY</p> <p>RAD.LEVEL_SW GATE_VAL CNG_SOL FUEL/S</p>	<p>M04-FW</p> <p>JOINT4(A1)</p>	<p>M04-MW</p> <p>OPT_FUSE_2 JOINT4(CA)</p>	<p>SUMITOMO 6098-1449</p> <p>BLC</p>	<p>SUMITOMO 6030-2981</p> <p>BZ</p>	<p>SUMITOMO 6189-0094</p> <p>SPHL</p>	<p>YAZAKI 7283-1027</p> <p>THW</p>	<p>YAZAKI 7123-4220-30</p> <p>CAB/H_2(MA)</p>	<p>YAZAKI 7123-4220-40</p> <p>CAB/H_3(MA)</p>	<p>YAZAKI 7323-1424-40</p> <p>ALTERNATOR</p>	
<p>M06-MW</p> <p>LEFT_SW</p>	<p>M06-FW</p> <p>OPT LEFT_SW</p>	<p>YAZAKI 7323-2064</p> <p>Dr</p>	<p>YAZAKI 7222-4220-40 Y02MGY</p> <p>ENG/H_3(CA)</p>	<p>YAZAKI 7222-6423-30 X02MB</p> <p>ENG/H_2(CA)</p>	<p>YAZAKI 7123-6423-30 X02FB</p> <p>FUEL_FEED/M</p>	<p>YAZAKI 7283-7623 050 2PF</p> <p>SUN</p>	<p>090 WATER PROOF SUMITOMO 6189-0031</p> <p>SI_SOL SG_SOL SF_SOL SC_SOL</p>	<p>F(6189-0172)</p> <p>JOINTC(MA)</p>	<p>SUMITOMO M(6188-0096)</p> <p>JOINTC(EN)</p>	<p>YAZAKI 7123-2825</p> <p>WASHER(MA)</p>	<p>YAZAKI 7123-2228</p> <p>THF THI GLOW/R(3,4)</p>	<p>YAZAKI 7123-2815</p> <p>OPT_LIGHT</p>	<p>AMP 174056-2</p> <p>HORN_SW PD_SW</p>	<p>SJD L02-FB</p> <p>LUB</p>	<p>SJD PH065-02010</p> <p>SP_R SP_L</p>	<p>SUMITOMO F(6189-0101)</p> <p>JOINTB(MA)</p>	<p>SUMITOMO M(6188-0049)</p> <p>JOINTB(EN)</p>	<p>YAZAKI 7323-7414-40</p> <p>LEVEL SW</p>
<p>SJD PH481-02065</p> <p>D1 D2 D10</p>	<p>YAZAKI 7283-5028 ASSY 7321-9822</p> <p>D3 D6 D7 D11 D12</p>	<p>YAZAKI 6098-0022 ASSY 6098-0126</p> <p>D4 D5</p>	<p>SUMITOMO 6409-2325</p> <p>JOINT_CON_5 JOINT_CON_4</p>	<p>YAZAKI 7123-6261-40 ASSY 7257-9322-40</p> <p>JOINT_E</p>	<p>SUMITOMO 040-24P-JC</p> <p>JOINT_CON1 JOINT_CON2</p>	<p>JAE 1L-AG5-7S-S3C1 (7119-1071-60)</p> <p>MAM MV2 MV1 MRF</p>	<p>SJD PH065-03010</p> <p>SAFTY/R</p>	<p>YAZAKI 7123-2840</p> <p>RLCC RLBM</p>	<p>SUMITOMO 6098-1493</p> <p>R11 R14</p>	<p>SJD PH481-02325</p> <p>FL75A</p>	<p>SJD PH481-02065</p> <p>FL45A</p>	<p>YAZAKI 7323-3010</p> <p>GLOW/R 1 GLOW/R 2 SAFTY/R B SAFTY/R C</p>						

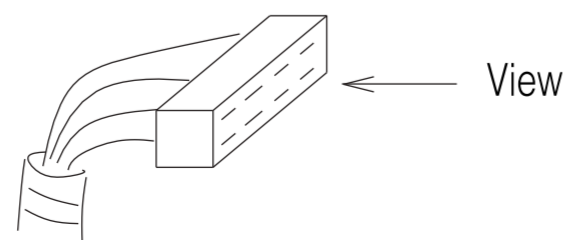

MA : MAIN HARNESS SIDE
 EN : ENGINE HARNESS SIDE
 CV : CONTROL VALVE HARNESS SIDE
 CA : CAB HARNESS SIDE
 MO : MONITOR HARNESS SIDE
 AI : AIR CONDITIONER HARNESS SIDE
 PU : PUMP HARNESS SIDE

